

2012-2016 Buick LaCrosse and 2012-2016 Buick Regal eAssist Vehicles

Quick Reference Sheet

Vehicle Identification

The Buick LaCrosse and Regal eAssist do **NOT** use exterior badging to identify them as eAssist vehicles.

To differentiate between standard and eAssist Buick LaCrosse and Regal vehicles, look in the following places to determine if high voltage exists:


Under the hood features:

- Yellow First Responder Cut Tape Label
- Large orange cable connected to generator



Instrument panel cluster features:

- Economy gauge
- Auto stop position on tachometer

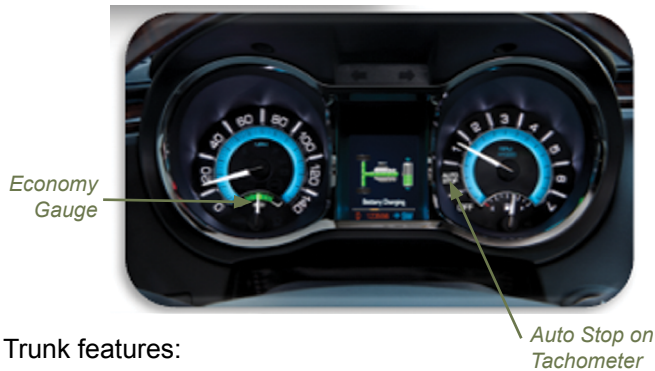

Trunk features:

- Battery label



High Voltage Disabling Procedure

To avoid personal injury in an emergency situation:

1. Turn ignition to "OFF" position
2. Cut the black 12 volt battery cable at yellow tape
3. Cut the auxiliary power module cable located rearward of the 12 volt battery at yellow tape

Note: After disabling 12 volt power, wait 1 minute to allow any un-deployed airbag reserve energy to dissipate.

Important:

To avoid accidental reconnection of the cut cable, remove a section of each cable to ensure they cannot inadvertently reconnect.



1. Use key or push button to turn off ignition



3. Cut auxiliary power module cable

2. Cut 12 volt battery cable

GM Service Technical College provides this QR free of charge to First Responders. This sheet can be displayed in a classroom as long as it is represented as GM information and is not modified in any way.


GM's First Responder Guides are available at www.gmstc.com

For information regarding modification of GM's First Responder Information for other uses, contact GM's Licensing Manager at: GM Licensing Program Headquarters • 5775 Enterprise Ct. • Warren, MI 48092 • Attn: Licensing Coordinator



High Voltage Labels

The Buick LaCrosse and Regal eAssist system features a series of labels that enable quick identification of potential electrical hazards.

The manual service disconnect label located on the cover of the high voltage battery illustrates how to operate the manual service disconnect switch.

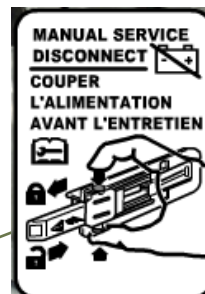

The first responder label located under the hood indicates the locations of the high voltage and low voltage batteries, as well as steps a first responder should take to disable the high voltage system.

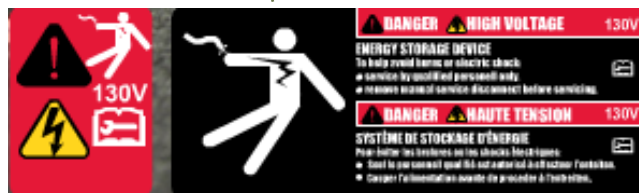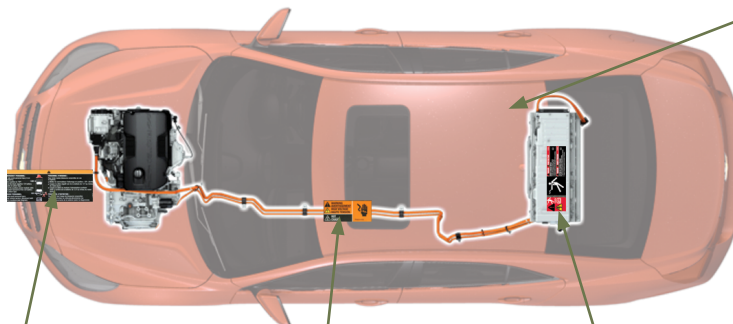

The high voltage danger labels are red and indicate that high voltage is present at all times. These labels are located on the high voltage battery in the trunk.

The high voltage warning labels are orange and indicate a potential shock hazard if high voltage is not properly disabled. The labels are located underneath the vehicle on all high voltage components with the exception of the high voltage battery which utilizes red danger labels. This tag will be visible if approaching a roll over incident.



Cable Cut Labels

The low voltage system provides the energy needed to enable the high voltage system, therefore, when approaching an emergency situation, the low voltage system underhood must be disabled.

Important:

To disable the low voltage system, cut through the low voltage cables on each side of the yellow labels to remove a section of the cable to ensure the cables cannot inadvertently reconnect.



Yellow Cut Tape Labels

High Voltage Cables - DO NOT CUT

Performing the high voltage disabling procedure prior to extrication work eliminates electrical current flow through the 12 volt system and disables the high voltage electrical system. No further action is required.


DANGER: Do **NOT** cut the orange high voltage cables. Cutting these cables can result in serious injury or death. No matter what disable method you have performed, always assume the high voltage cables and components contain high voltage.



High Strength Steel

The body structure contains high strength steel; this is highlighted in blue. The occupants are protected from front, rear and side impacts by a structural cage created by the underlying vehicle structural design.

Additional crumple zones protect the occupant with front, side and rear rails that are designed to crush in a crash.

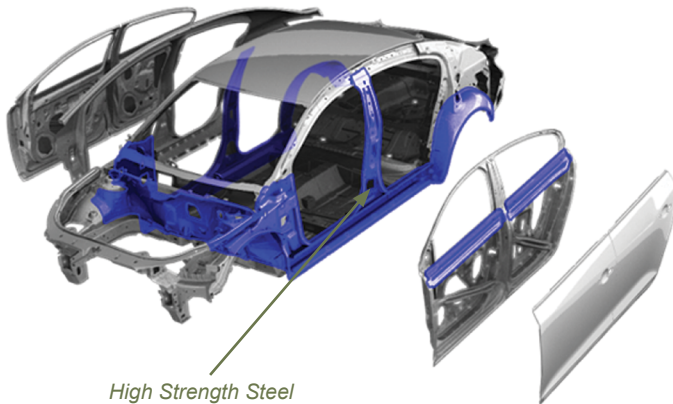

High Strength Steel

First Responder Considerations

Fire

The battery on fire will not explode. If battery cells reach high enough temperature, they vent and release electrolyte. Battery electrolyte is flammable. Use copious amounts of water to cool the battery and extinguish the fire. ABC dry chemical extinguisher will not extinguish a battery fire.

Water

The high voltage battery is isolated from the vehicle chassis. If the vehicle is immersed in water, you will not be electrocuted by touching the vehicle.

Locate and review the Lithium-Ion Battery Chemistry Material Safety Data Sheet for more information.

Vehicle DO NOT CUT ZONES

Do **NOT** cut the:

- Roof rails near the center pillar, contains side curtain airbag inflators.
- Front seat back on the outboard edge, contains side airbags.
- Center pillar near the rocker, contains the seat belt retractor pretensioner and side impact sensor.

WARNING: Do **NOT** cut into the vehicle until the 12V electrical system has been disabled. Cutting into the vehicle prior to disconnecting and isolating the 12V electrical energy sources may cause airbag deployment resulting in serious injury.

